

## INSTALLATION INSTRUCTIONS

### Filter Rack for Down and Horizontal (NPFLTRK006A00)

1. Unpack top and bottom filter racks, and filters. Remove side panel on HVAC unit.
2. Install bottom rack. Slide rack over to right side (when facing coil) of HVAC unit. Set rack in front of coil and screw rack to right side of coil frame through pre-punched hole. **Maximum screw length 1/2".**
3. Install top rack. Slide rack over to right side of HVAC unit. Set rack in front of coil and screw rack to right side of coil frame. **Maximum screw length 1/2".**
4. Remove screw in the side of the HVAC unit and re-insert through prepunched hole in the end of top rack.
5. If using 2" wide filter remove spacer. ILL. 2.
6. Install the (4) provided tinnerman clips on the HVAC unit's base at the screw locations of the side panel.
7. To change filter:  
Remove side panel on HVAC unit.
  - Remove middle filter first. Slide remaining filters to middle of rack for removal.
  - To install filters, reverse above operation.
8. Install the provided filter access sticker on the HVAC unit's side panel.

Filter Width	Qty. / Size
1" filter	(3) 12" x 24" x 1"
2" filter	(3) 12" x 24" x 2"

