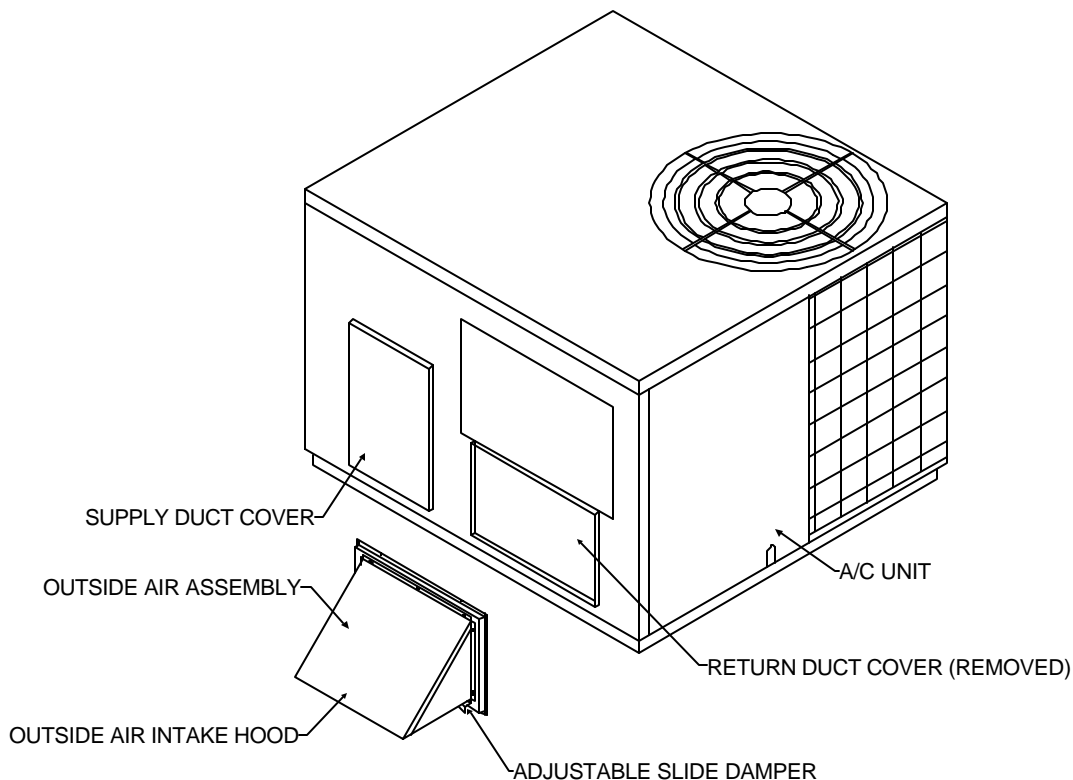


The 0-35% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. The amount of outside air is controlled by simply adjusting the slide damper. The panel is fully insulated.

**STEP 1:**

Check for correct number of parts. See list below:

- 1 ea. - Outside Air Intake panel assembly with hood and slide damper.
- 6 ea. - #10-16 x ½" self tapping screws.

STEP 2:

Remove return air duct cover from unit.

STEP 3:

Install outside air assembly as shown in Figure 1 over duct opening with the self tapping screws provided.

STEP 4:

Adjust the slide damper to the desired position.

INTERNATIONAL COMFORT PRODUCTS

651 HEIL-QUAKER AVE
POST OFFICE BOX 128
LEWISBURG, TENNESSEE
37091
PHONE (931) 359-3511
FAX (931) 270-4199