

The 0-35% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. A 2-position control motor that opens the intake damper when the blower is energized. The amount of air is controlled by the adjustable slide damper. The intake panel is fully insulated..

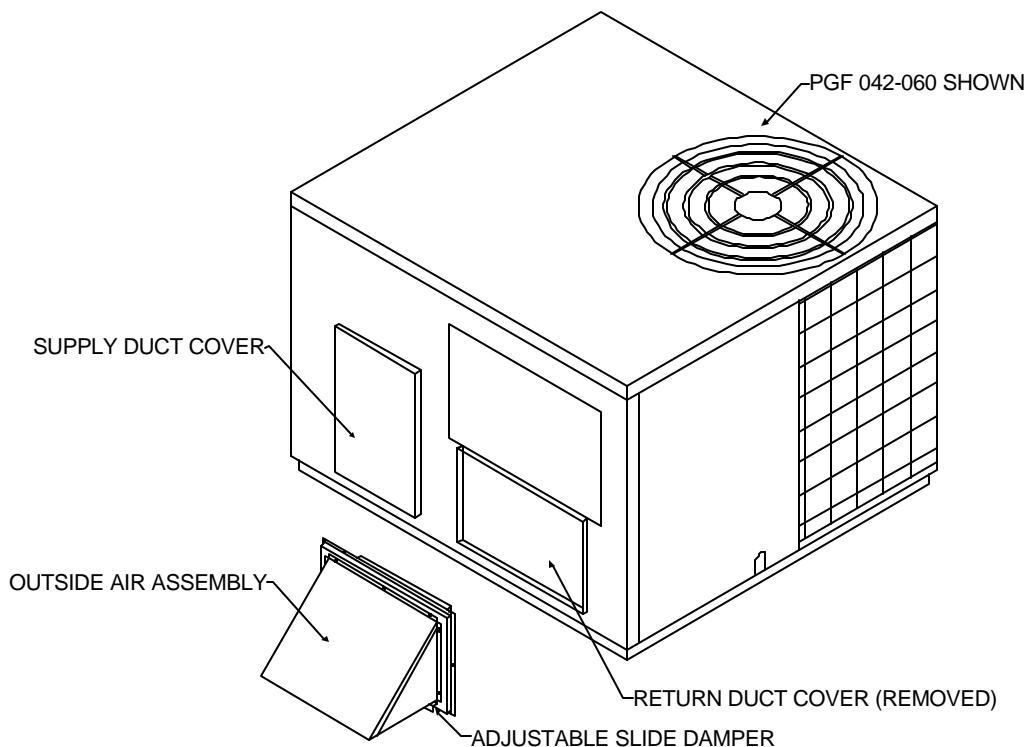


FIGURE 1

**STEP 1:**

Check for correct number of parts. See list below:

- 1 ea. - Outside Air Intake damper assembly with hood and slide damper.
- 6 ea. - #10-16 x ½" Self tapping screws.

**STEP 2:**

Remove return air duct cover from unit.

**STEP 3:**

Remove blower access panel. Route the cable around the panel next to coil, then along division wall around fan over division wall to low voltage. The PGF/PAF/PHF 042-060 will have a plug behind coil.

**STEP 4:**

Install outside air assembly as shown in Figure 1 over duct opening with the self tapping screws provided.

**STEP 5:**

Adjust the slide damper to the desired position.

**INTERNATIONAL COMFORT PRODUCTS**

651 HEIL-QUAKER AVE  
POST OFFICE BOX 128  
LEWISBURG, TENNESSEE  
37091  
PHONE (931) 359-3511  
FAX (931) 270-4199