

INSTALLATION INSTRUCTIONS COIL GUARD

The Coil Guard is designed to prevent damage to the condenser coil of the unit. The following parts are required:

A - Rear Coil Guard (1)

B - Side Coil Guard (1)

C - Hardware Package (1)

12 - #10- 16 x 1/2 Screw

1 - Installation Instruction

MODEL	UNIT SIZE
AGC09CU0A	12.5 TON
AGC10CU0A	15 TON

STEP 1:

Check for correct model number and number of parts above:

STEP 2:

Take (A) rear coil guard and align holes with corner posts of unit and secure.

STEP 3:

Then take (B) side coil guard and align holes with corner posts of unit and secure.

