

The 0-25% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. A 2-position control motor that opens the intake damper when the blower is energized. The amount of air is controlled by the adjustable slide damper. The intake panel is fully insulated..

Filter Rack Model# AXB020FKA must be used with Outside Air Damper.

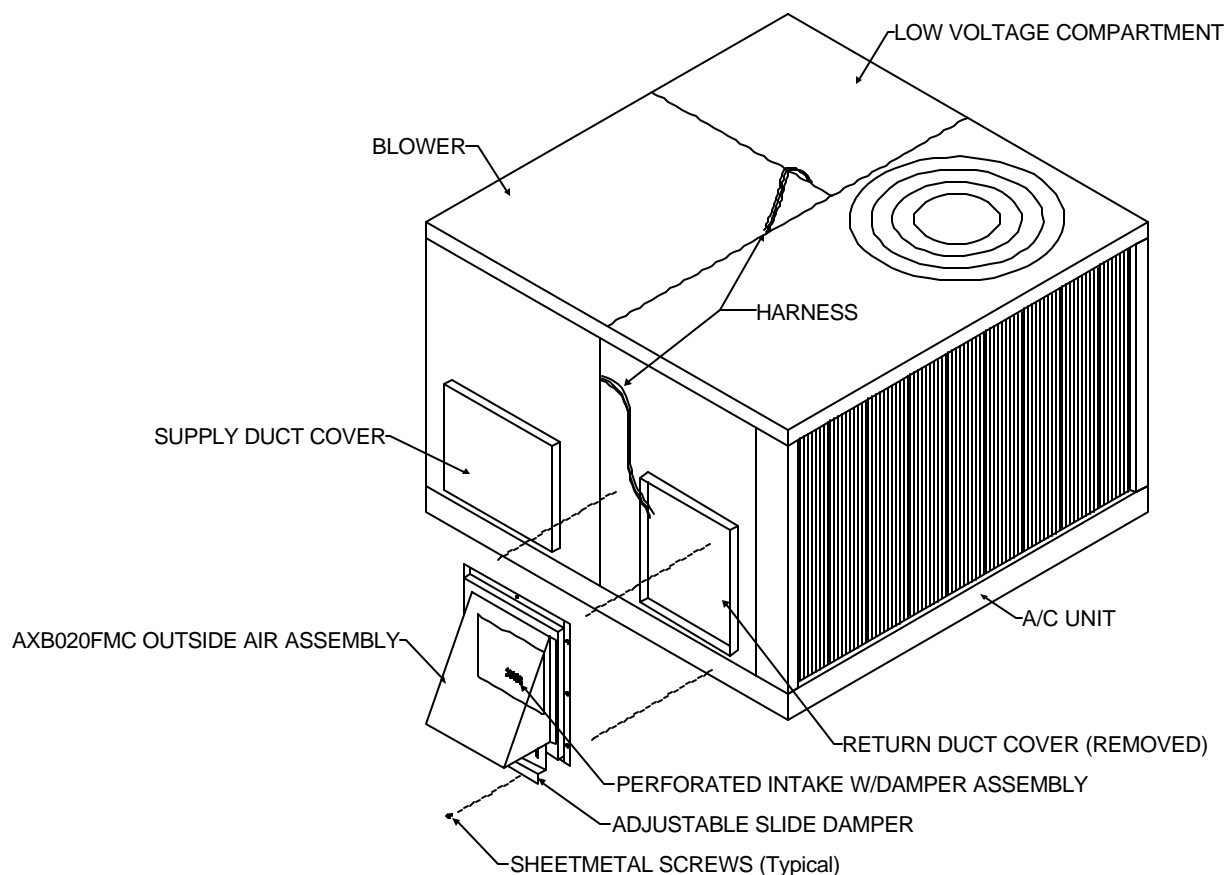


FIGURE 1

STEP 1:

Check for correct number of parts. See list below:

1 ea. - Outside Air Intake damper assembly with hood and slide damper.

STEP 2:

Remove return air duct cover from unit, and save the screws.

STEP 3:


Remove blower access panel. Route the cable through the panel next to coil, then along division wall behind blower over division wall to low voltage.

STEP 4:

Install outside air assembly as shown in Figure 1 over duct opening with the screws removed in Step 2.

STEP 5:

Adjust the slide damper to the desired position.

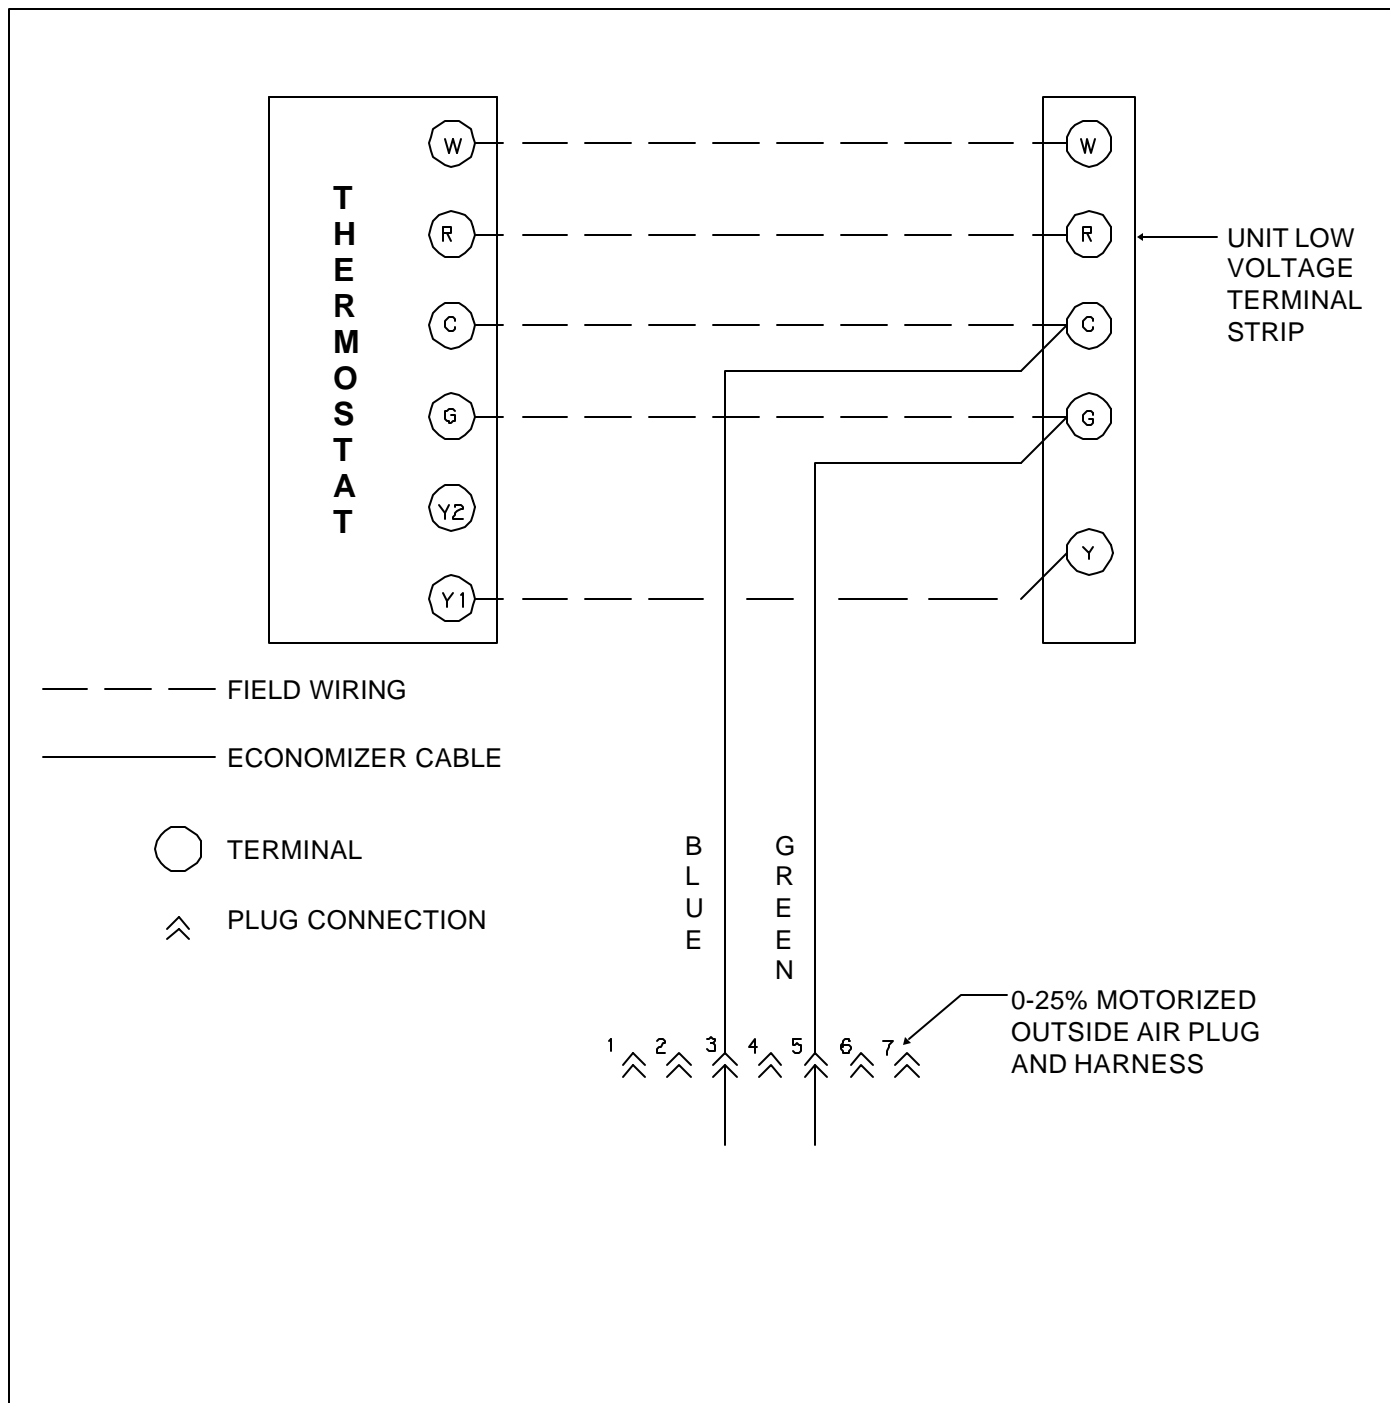

INTERNATIONAL COMFORT PRODUCTS

651 HEIL-QUAKER AVE
POST OFFICE BOX 128
LEWISBURG, TENNESSEE
37091

PHONE (931) 359-3511
FAX (931) 270-4199