

# Installation instruction

## OCA20 AND OCA24 MODELS

Manufactured by:


**ICP Corporation (Canada)**

3400 Industrial Blv Sherbrooke PQ Canada


### Oil coil adapter OC20

Used with EPD / EXM / EPM / EXD and EED "B15" series cased coil.

- 1- Fix all parts with the supplied screws as shown on drawing. Cut and install the felts as shown on drawing.

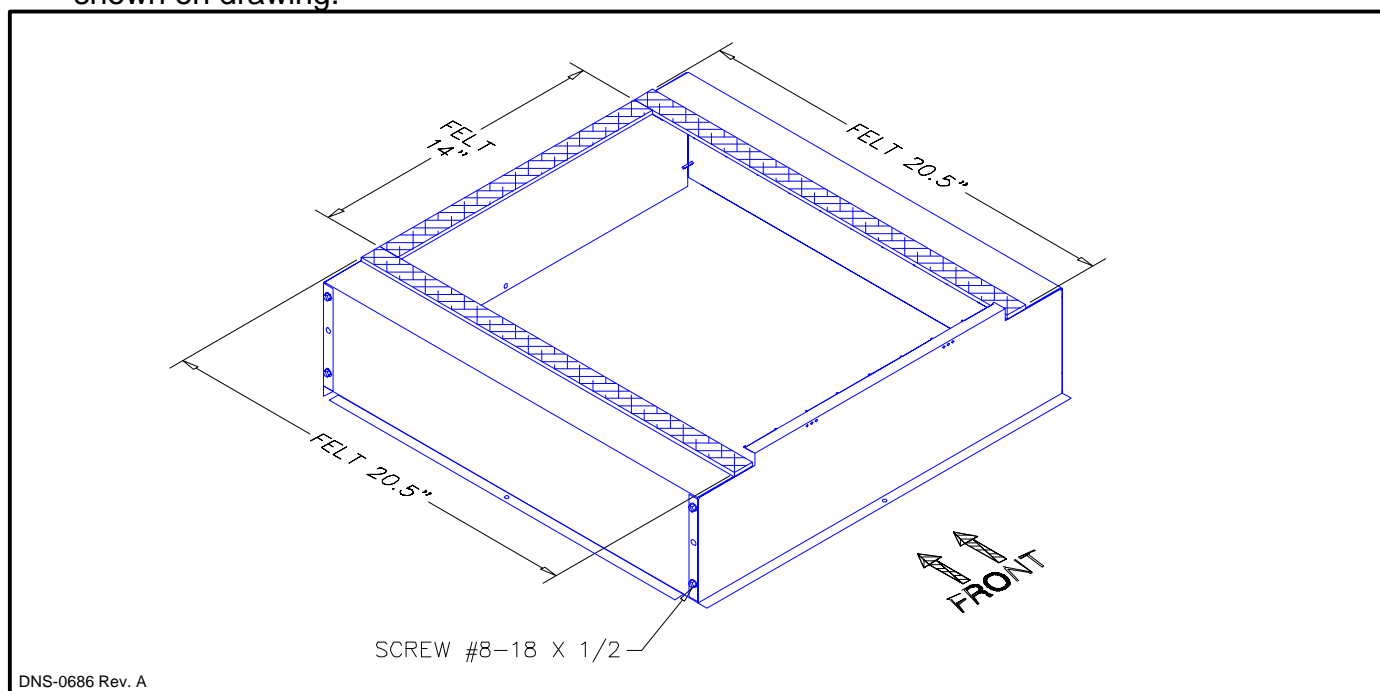


- 2- Fix the OCA and "B15" series cased coil on the furnace as shown on drawing.

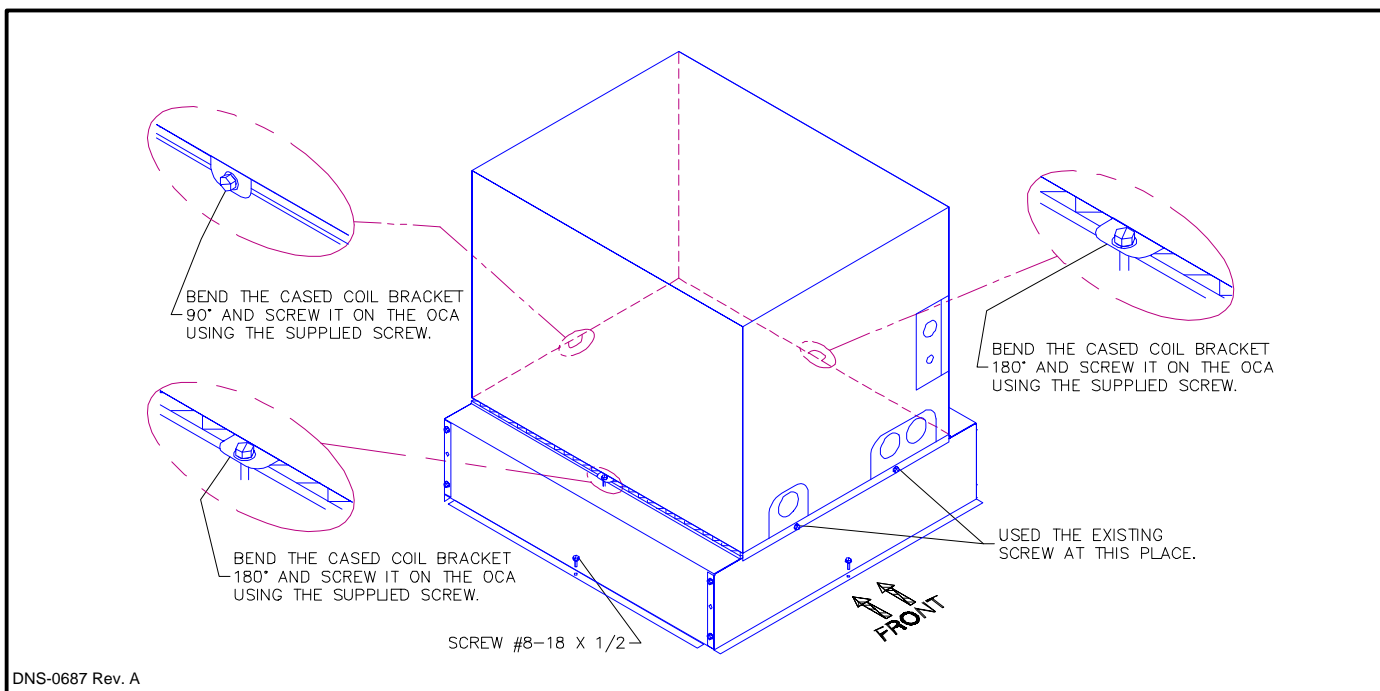


## Oil coil adapter OC20

Used with EPD / EXM / EPM / EXD and EED “F19” series cased coil.

- 1- Fix all parts with the supplied screws as shown on drawing. Cut and install the felts as shown on drawing.

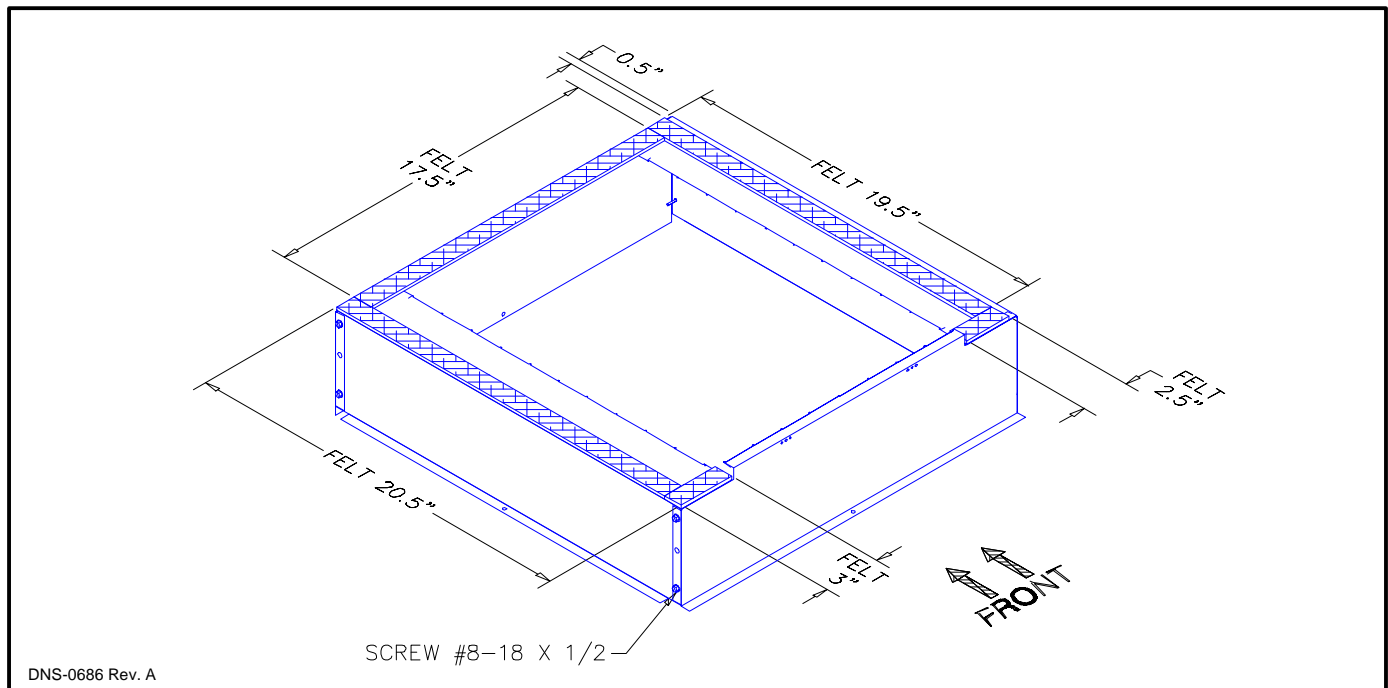


- 2- Fix the OCA and “F19” series cased coil on the furnace as shown on drawing.

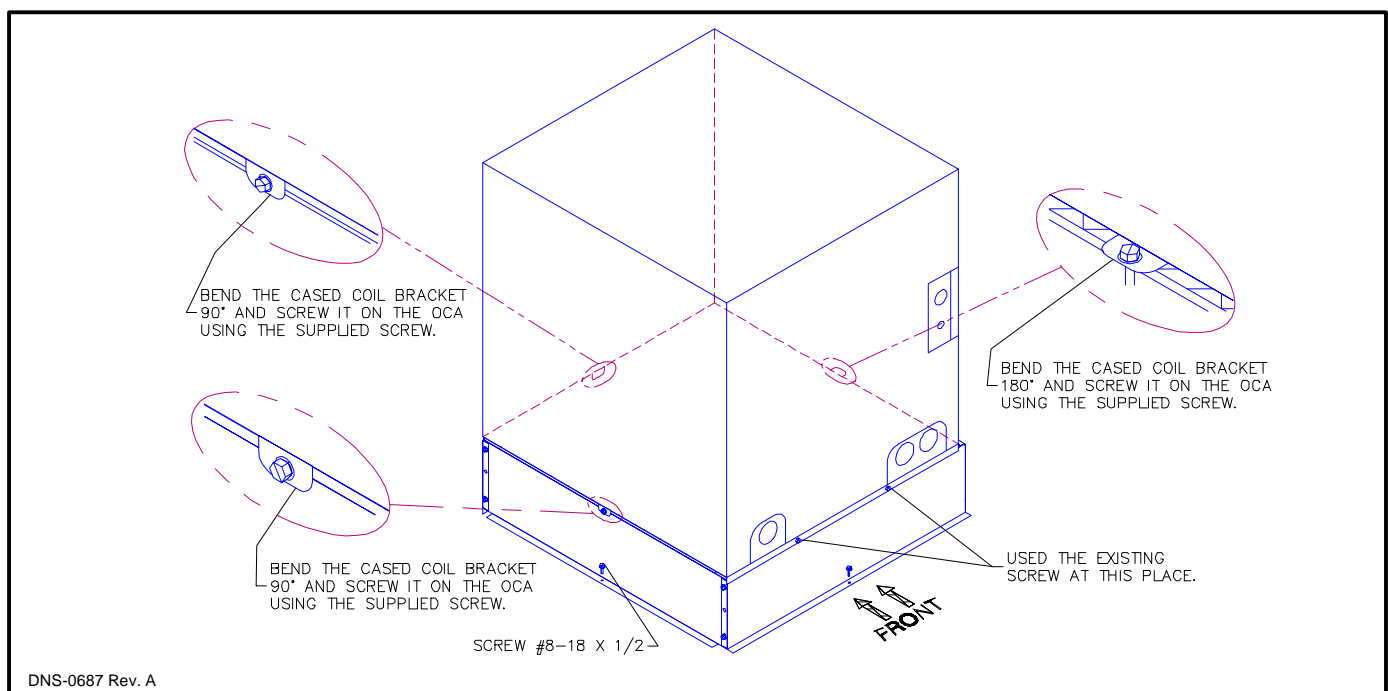

## Oil coil adapter OC24

Used with EPD / EXM / EPM / EXD and EED "J22" series cased coil.

- 1- Fix all parts with the supplied screws as shown on drawing. Cut and install the felts as shown on drawing.

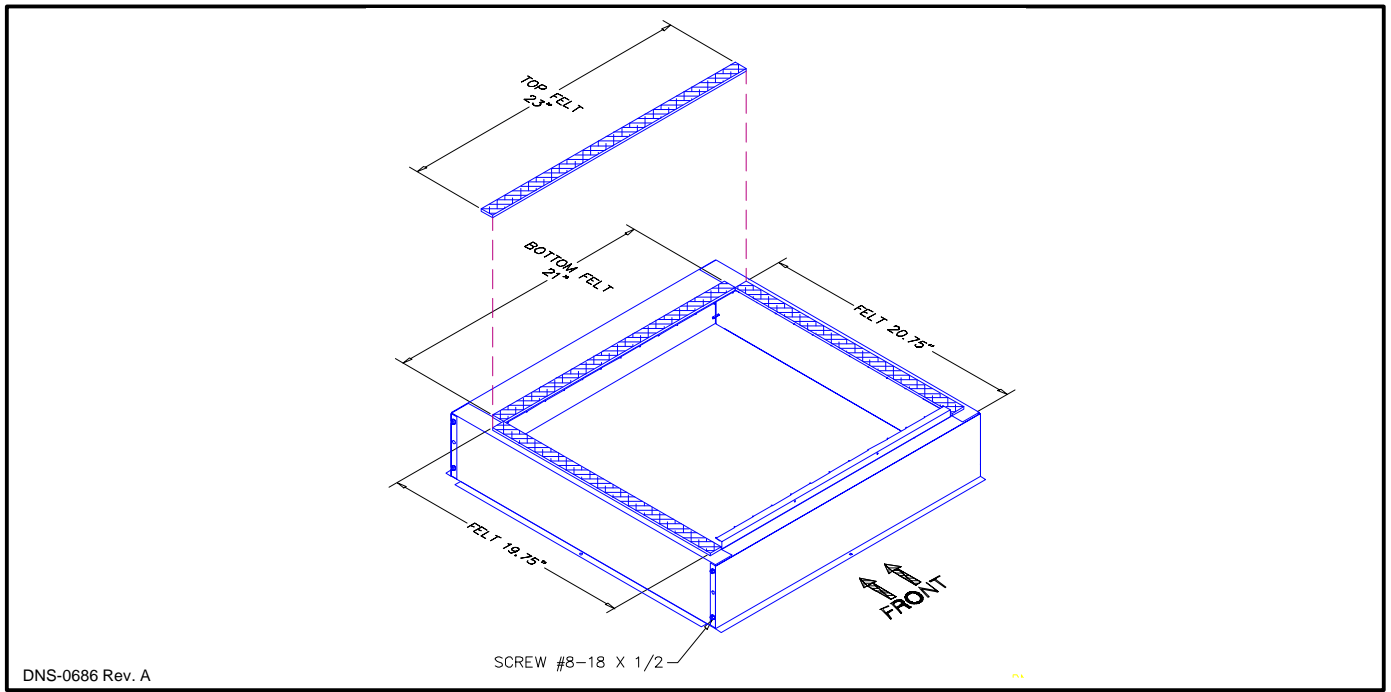

- 2- Fix the OCA and "J22" series cased coil on the furnace as shown on drawing.

