

WIRING DIAGRAM MANUAL

Apartment Fan Coil

FMA4P, WAMA

Safety Labeling and Signal Words

DANGER, WARNING, CAUTION, and NOTE

The signal words **DANGER**, **WARNING**, **CAUTION**, and **NOTE** are used to identify levels of hazard seriousness. The signal word **DANGER** is only used on product labels to signify an immediate hazard. The signal words **WARNING**, **CAUTION**, and **NOTE** will be used on product labels and throughout this manual and other manuals that may apply to the product.

DANGER – Immediate hazards which **will** result in severe personal injury or death.

WARNING – Hazards or unsafe practices which **could** result in severe personal injury or death.

CAUTION – Hazards or unsafe practices which **may** result in minor personal injury or product or property damage.

NOTE – Used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

Signal Words in Manuals

The signal word **WARNING** is used throughout this manual in the following manner:



The signal word **CAUTION** is used throughout this manual in the following manner:



Signal Words on Product Labeling

Signal words are used in combination with colors and/or pictures on product labels.

TABLE OF CONTENTS

EHK2 Wiring Diagram 2

MODELS

FMA4P1800A1	WAMA1800A1
FMA4P2400A1	WAMA2400A1
FMA4P3000A1	WAMA3000A1
FMA4P3600A1	WAMA3600A1

WARNING

DEATH, PERSONAL INJURY, AND/OR PROPERTY DAMAGE HAZARD


Failure to carefully read and follow this warning could result in equipment malfunction, property damage, personal injury and/or death.

Installation or repairs made by unqualified persons could result in equipment malfunction, property damage, personal injury and/or death.

The information contained in this manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.

Installation must conform with local building codes and with the National Electrical Code NFPA70 current edition or Canadian Electrical Code Part 1 CSA C.22.1.

EHK2 Wiring Diagram

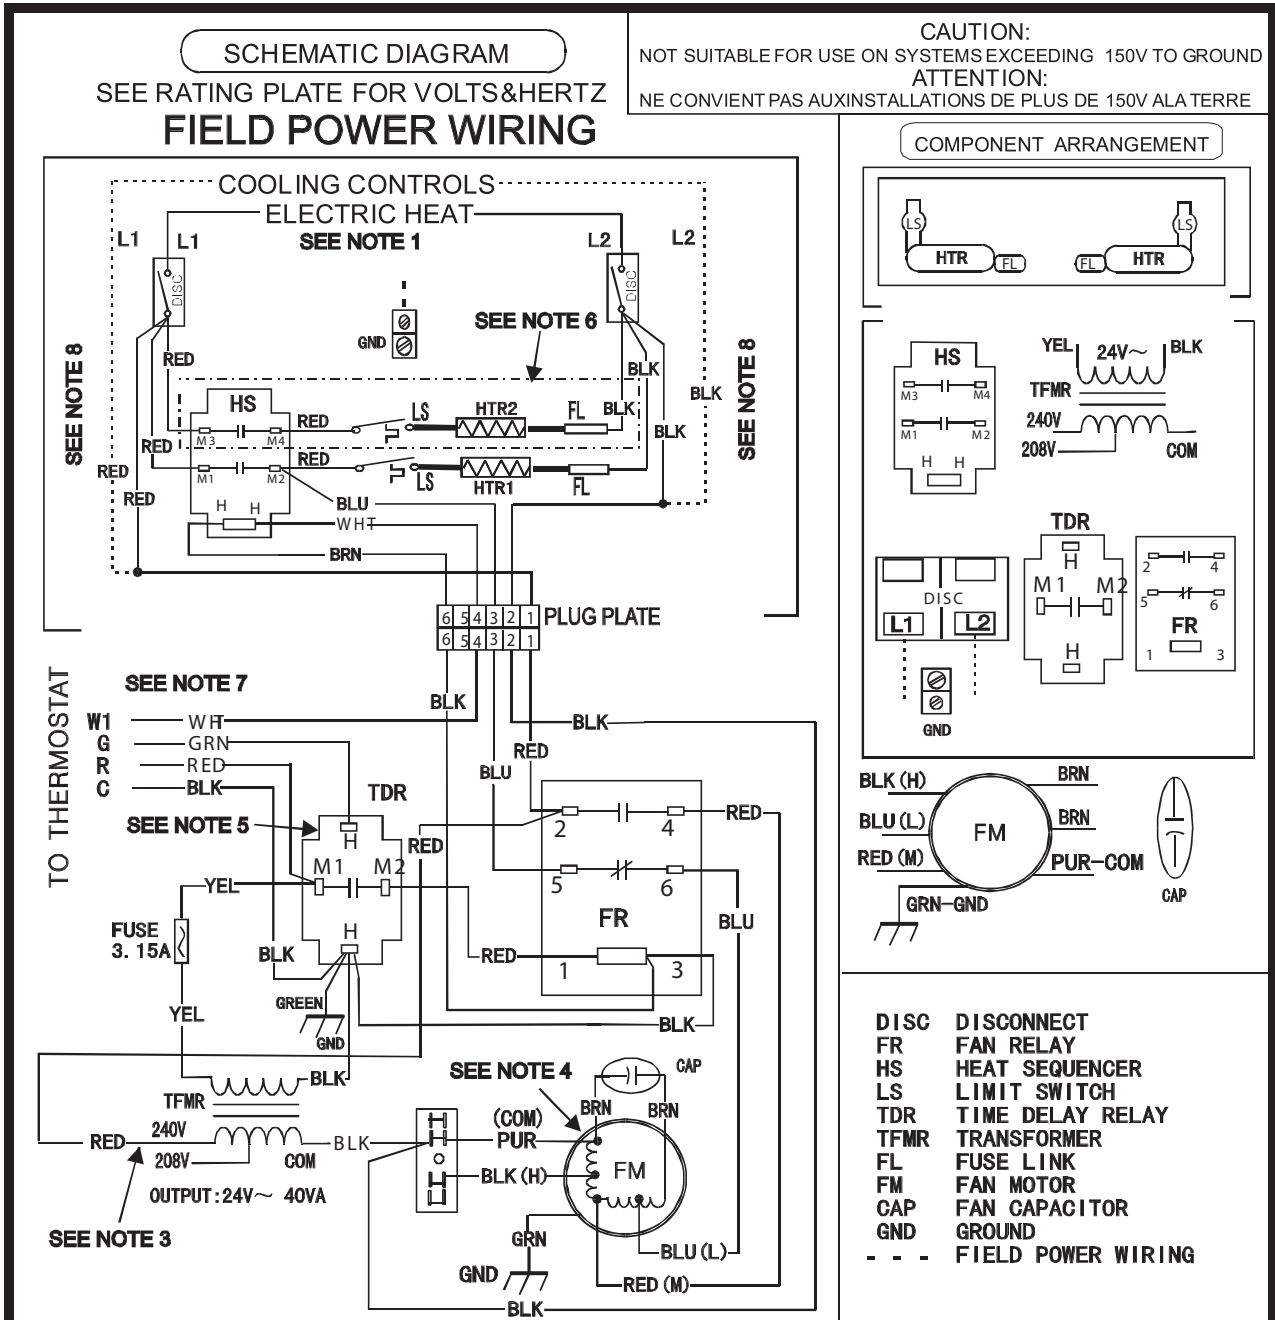

- NOTES:**
- 1: Use copper wire (75°C min) only between disconnect switch and unit, To be wired in accordance with N.E.C. and local codes.
 - 2: If any of the original wire as supplied must be replaced, use the same or equivalent type wire.
 - 3: Remove the red lead from "240V" terminal and then connect the red lead to "208V" terminal on the transformer for 208 volts.
 - 4: Factory default fan speed is medium; FM red wire connected to FR #4. For HI speed connect FM black wire to FR #4. For LOW speed connect FM blue wire to FR #4 and FM red wire to FR #6. Always connect the unused FM wire to the dummy terminal block.
 - 5: TDR has a 1-30s on delay when "G" is energized and a 45-75s off delay when "G" is de-energized.
 - 6: The 5kW heater kit has HTR1 only. Fan coils equipped with electric heat connect power supply to circuit breaker.
 - 7: Connect R to R, G to G, etc. See outdoor or indoor instructions for details.
 - 8: Cooling controls wiring not used with electric heaters.

202070290385

A13131